


These instructions apply to items:

- • SS-FR-6 6" Single Stainless Steel Fire Pit Ring
- • SS-FR-12 12" Double Stainless Steel Fire Pit Ring
- • SS-FR-18 18" Double Stainless Steel Fire Pit Ring
- SS-FR-24 24" Double/Stainless Steel Fire Pit Ring
- SS-FR-30 30" Triple Stainless Steel Fire Pit Ring
- SS-FR-36 36" Triple Stainless Steel Fire Pit Ring

88,000 BTU Max.
92,000 BTU Max.
147,000 BTU Max.
296,000 BTU Max.
435,000 BTU Max.
443,000 BTU Max.
593,000 BTU Max.

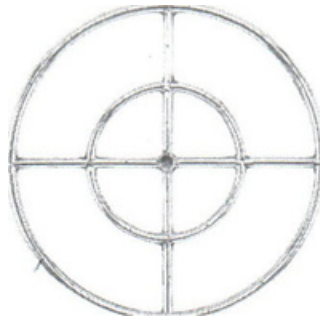

Fire Pit Rings
(6", 12" 18", 24", 30", 36", 48")
Installation Guide
PIN: AFG-M-SSFR

CAUTION - DO NOT DISCARD THIS MANUAL

- • Important Operating and Maintenance Instructions included.
- • Read, understand & follow these instructions for safe installation & operation
Leave this manual with party responsible for use and operation
Ensure proper drainage in fire feature to allow water to drain

Installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code. ANSI 2223.7.

WARNING: If the information in these instructions is not followed exactly, a fire may result causing property damage, personal injury or death

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance.
- **WHAT TO DO IF YOU SMELL GAS**
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

WARNING: FOR OUTDOOR USE ONLY

For use with NATURAL or LP GAS Only

NOT TO BE USED WITH SOLID FUELS.

WARNING: NEVER leave an operating fire feature unattended by an adult.

Inspect the Appliance and Components

Warning

- Do NOT install damaged components
- Do NOT install incomplete components
- Do NOT install substitute components


Clearances

Below is a general fire feature structure clearance guideline. Be sure to check for fire feature clearance guidelines, codes, or ordinances specifically for your area.

WARNING

Never operate an open flame fire feature under any type of overhang or cover.

WARNING - FIRE RISK

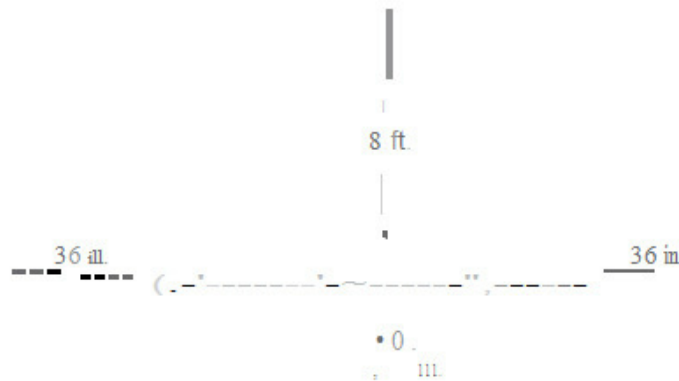

Assembly

Each Fire Pit Ring includes a center hub screw cap with wrench for installation. This screw cap provides the option to install the Fire Pit Ring with the gas exit holes facing up or down depending on the fuel type, region, and the type of fire feature the Fire Pit Ring is being used with. Install the screw cap into the center hub opposite of the gas inlet.

Before installing Fire Pit Ring to gas fitting or screw cap, be sure gas tape-or pipe dope is applied to assure of no gas leaks with the Fire Pit Ring installation.

WARNING

NEVER operate a Fire Pit Ring without the screw cap installed in the center hub.